


## **ATTENTION!**

### **REMOVE YELLOW SHIPPING BRACKET BEFORE INSTALLATION AND USE**

1. Remove screw **(A)**, holding filter access door **(B)** and remove door.
2. Loosen screw **(D)** holding the yellow shipping bracket **(C)** to the pump and slide off bracket.
3. Tighten screw **(D)**.
4. Replace filter access door **(B)** and secure with screw **(A)**.

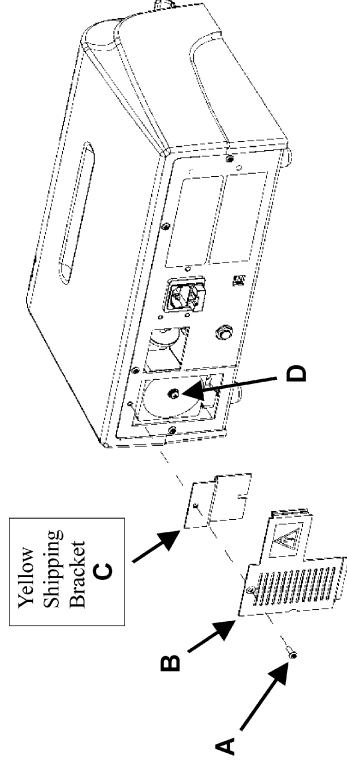


5. Save the yellow shipping bracket for future use

16030-105 Rev A

## **ATTENTION!**

### **REMOVE YELLOW SHIPPING BRACKET BEFORE INSTALLATION AND USE**

1. Remove screw **(A)**, holding filter access door **(B)** and remove door.
2. Loosen screw **(D)** holding the yellow shipping bracket **(C)** to the pump and slide off bracket.
3. Tighten screw **(D)**.
4. Replace filter access door **(B)** and secure with screw **(A)**.

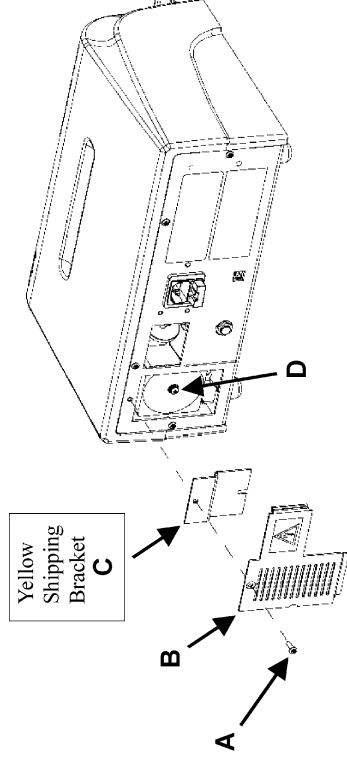

5. Save the yellow shipping bracket for future use

16030-105 Rev A